## **KOHLER** RUNNER ADJUSTMENT INSTRUCTIONS

TERRACE VANITY CABINETS EB1185-G1C EB1186-G1C EB1188-G1C EB1188-G1C EB1189-G1C

Drawer removal		Drawer insertion	
To remove the drawer, squeeze the organge locking devices in the direction indicated by the arrow on both sides of the drawer.	While squeezing the locking devices, slide the drawer outward and upward. Gently place the drawer down.	To insert the drawer, position it on the runners and check that the pins at the back of the runners are aligned with the holes at the back of the drawer.	Push the drawer straight back until it clicks into place. Check that the drawer is correctly positioned by opening & closing the drawer.

Adjustment of runners				
Side adjustment: +/-1.5mm	Height adjustment: +3mm	Tilt adjustment:	Depth adjustment: +2/-1mm	
On both sides of the drawer, turn the dials via the locking devices in the direction you wish to adjust the drawer.	Remove the drawer. Squeeze the plastic component indicated in the diagram below and slide it back to raise the height of the drawer. Repeat on the other runner.	Remove the drawer. To tilt the drawer front forward, turn the dials shown in the diagram below toward the centre of the drawer.	To bring the drawer front back, roll the dials shown in the diagram below, on both runners backward. Roll the dials forward to bring the drawer front forward.	