





#### A - ACTIVATE TOILET

- Press to activate toilet by remote.

#### B - COVER OPEN/CLOSE

- Press to open/shut the seat cover (while unseated).

#### C - SEAT OPEN/CLOSE

- Press to open/shut the toilet seat (while unseated).

#### D - ECO FLUSH

- Press to perform half flush.

#### E - FULL FLUSH

- Press to perform full flush.

#### F - SEAT TEMP

- Press to adjust seat temperature between 0 dots (min) to 5 dots (max).

#### G - FRONT WASH

- Press to enter front wash (while seated). Wash will automatically stop after 5 minutes or upon pressing STOP button.

#### H - STOP

- Press to stop the currently active bidet function.
- Press and hold to turn off the remote.

#### I - REAR WASH

- Press to enter rear wash (while seated). Wash will automatically stop after 5 minutes or upon pressing STOP button.

#### J - WATER TEMP

- Press to adjust water temperature when front or rear wash is active. Adjustment between 0 dots (min) to 5 dots (max).

#### K - MASSAGE WASH

- Press to enter oscillate mode when front or rear wash is active (lower dot).
- Press a second time for pulsate mode (upper dot).
- Press a third time to enter oscillate and pulsate modes simultaneously (2 dots).
- Press a fourth time to exit this mode (0 dots).

#### L - SPIRAL WASH

- Press to enter spiral wash when rear wash is active. Spiral icon will blink.
- Press again to exit spiral wash mode. Spiral icon will stop blinking.

#### M - WAND MOVE

- Press to adjust wand position.

#### N - DRYER

- Press to activate dryer function (while seated).
- Press again to adjust air temperature between 0 dots (min) to 5 dots (max). Dryer will automatically stop after 4 minutes or upon pressing STOP button.

#### O - UV CLEAN

- Press to enter UV sterilisation function (while unseated). UV icon will blink.

#### P - WATER PRESSURE

- Press to adjust water pressure when front or rear wash is active. Adjustment between 0 dots (min) and 5 dots (max).