

17492 17493 17494 MULTI-FUNCTION HAND SHOWER

BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.

NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. An in line water filter must be used with this product.
3. The highest working pressure for hand shower is 0.5Mpa(5 bars). If it exceeds 0.5Mpa(5 bars), a pressure reducer is needed. The highest water and environment temperature is 60 °C. Please keep the hand shower away from any heater or it may become damaged and cause injury to the user.
4. Don't remove the flow controller, or the hand shower will be damaged.
5. **Working pressure for hand shower: 1 to 5 bars.**

ROUGH-IN DIMENSIONS

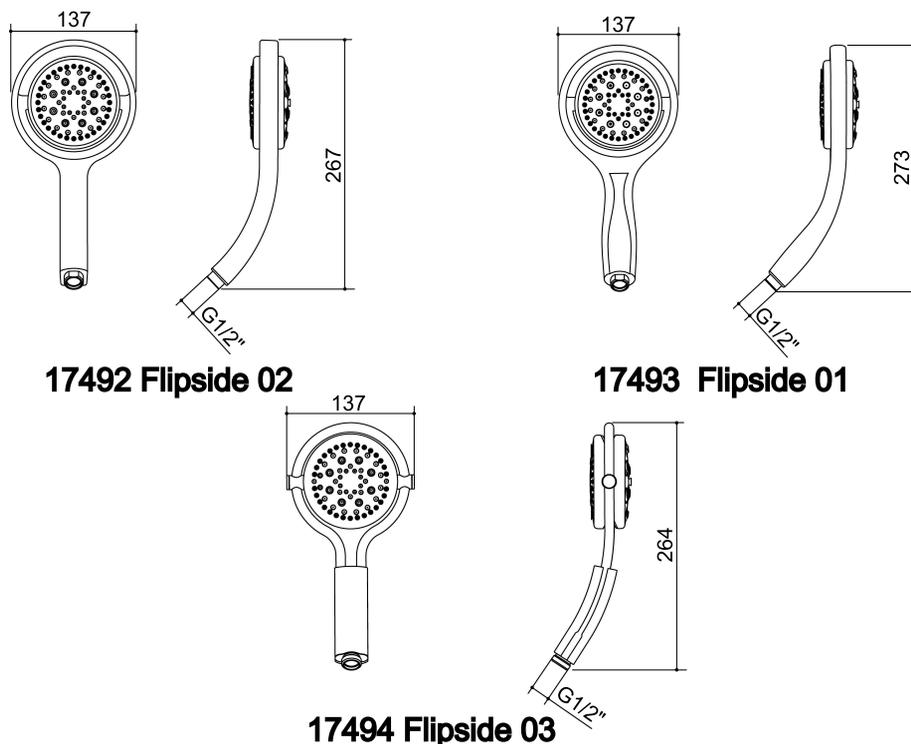


INSTALLATION

How to Install the Hand Shower


For 17493X only, put the water flow restrictor(4) into the hand shower(1) inlet; Don't remove the regulator of the hand shower(1).

Put the screen washer(2) into the shower hose(3, not provided) connector, screw the hand shower to the shower hose. Connect another end of shower hose to the water supply.

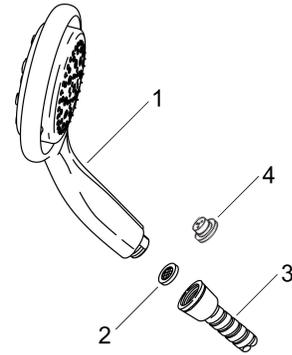


OPERATING INSTRUCTIONS

Rotate the head of the hand shower to change the spray patterns as shown.

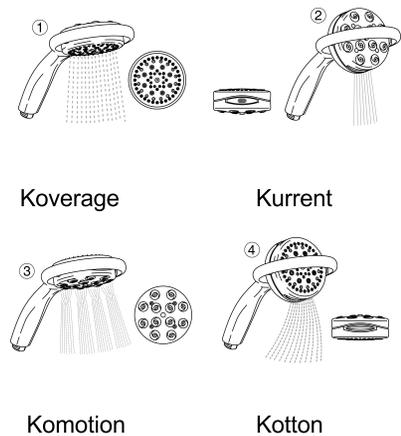

How to Clean the Nozzles

Any debris or mineral build-up may cause the flow stream to become distorted or reduce the flowrate. To remove the debris or mineral build-up, run water through the hand shower, firmly press or rub your finger back and forth across the rubber nozzles.

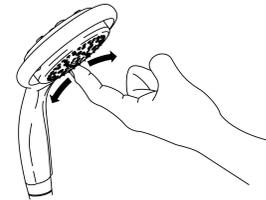

How to Clean the Screen Washer

Remove the hand shower. Take out the screen washer. Clean the filters by soaking them in warm vinegar. Reinstall the screen washer and hand shower.




CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

17492 17493 17494 MULTI-FUNCTION HAND SHOWER

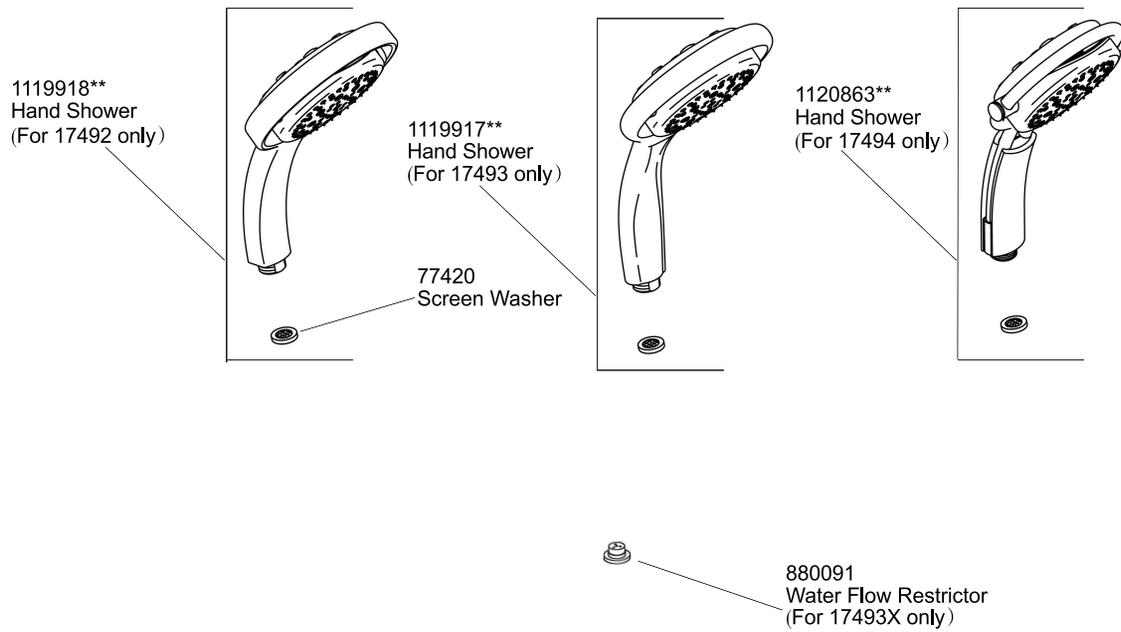

**Color code must be specified when ordering.