


## Contractor Pre-Installation Checklist

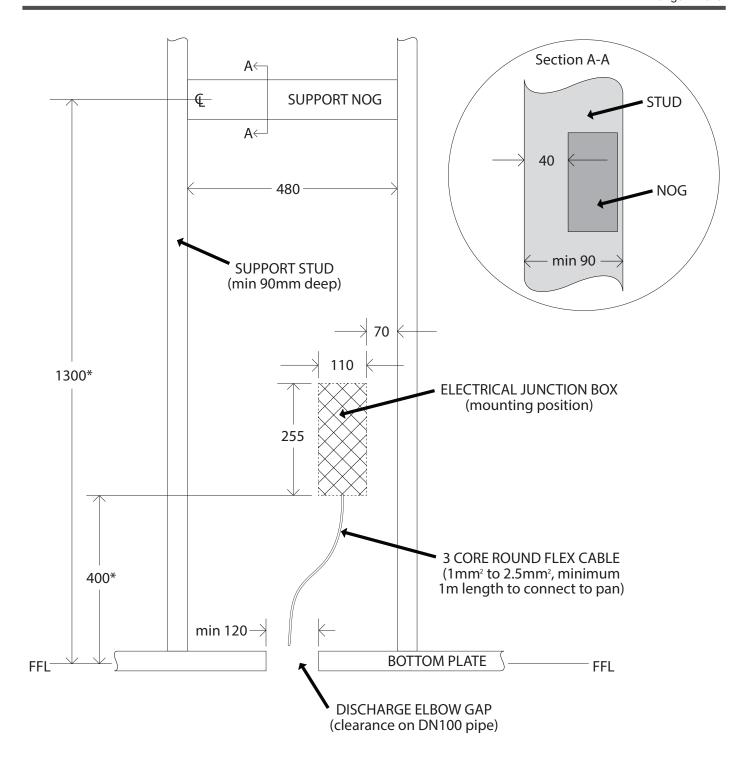

## **PLEASE NOTE:**

- \* All units in mm. Dimensions are a guide only please take measurements from the product where possible
- \* Allow for floor coverings (eg: tiles) when measuring from finished floor level (FFL)
- \* Ensure the wall cavity is at least 90mm
- \* Use a DN100 waste pipe for S-trap installations
- \* Run an electrical cord from the bottom of the junction box, long enough to connect to the pan
- \* Consult with a hydraulic consultant or plumber on the installation of high-hazard backflow prevention in accordance with AS/NZS3500.1

1286788-A02-B ©Kohler Co. June 2016