


14428A-4 HOB-MOUNT BATH SET

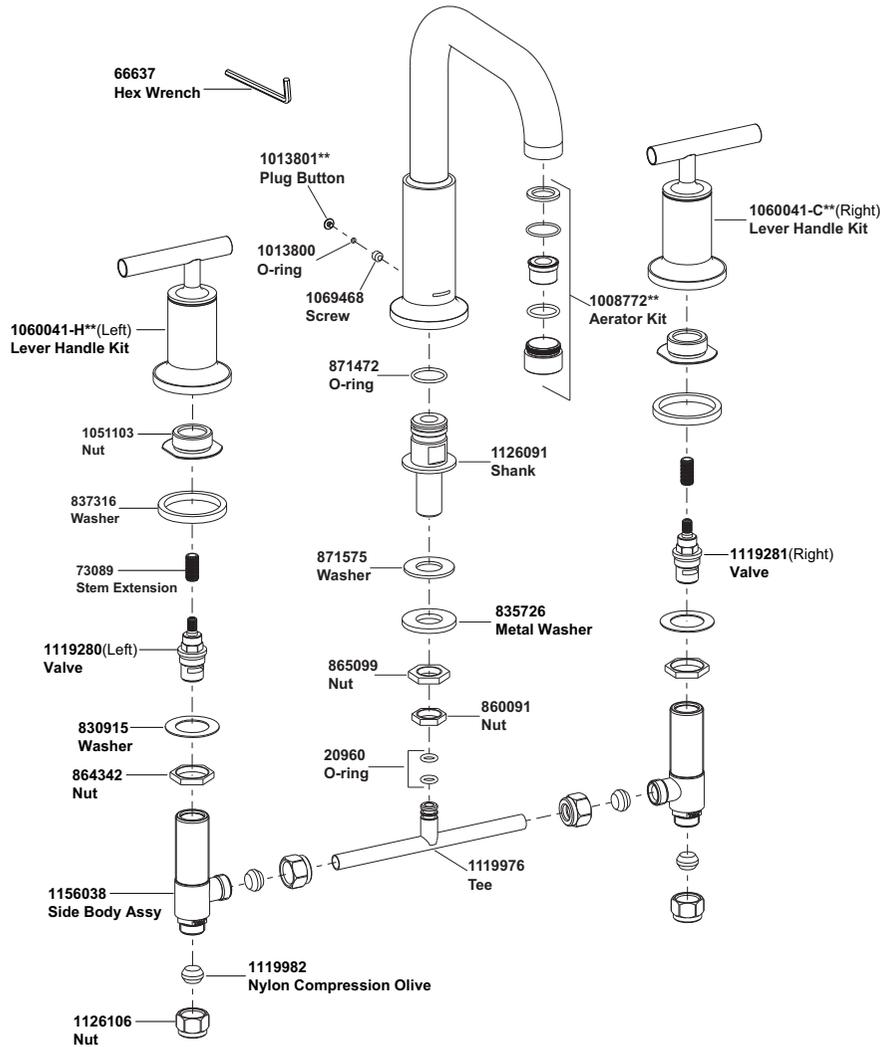

**Color code must be specified when ordering

14428A-4 HOB-MOUNT BATH SET

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. An in line water filter must be used with this product.
3. Inspect the supply pipes for damage. Replace as necessary.
4. Observe local plumbing codes.
5. If possible, install this bath set before installing the bath tub.
6. Recommended working pressure: 1 to 5 bars.
7. Maximum working pressure: 8 bars.
8. All installations should comply with the relevant requirements of AS/NZS 3500.

HANDLE OPERATION

Left handle opens with one-quarter turn counter-clockwise.
Right handle opens with one-quarter turn clockwise.

ROUGH-IN DIMENSIONS

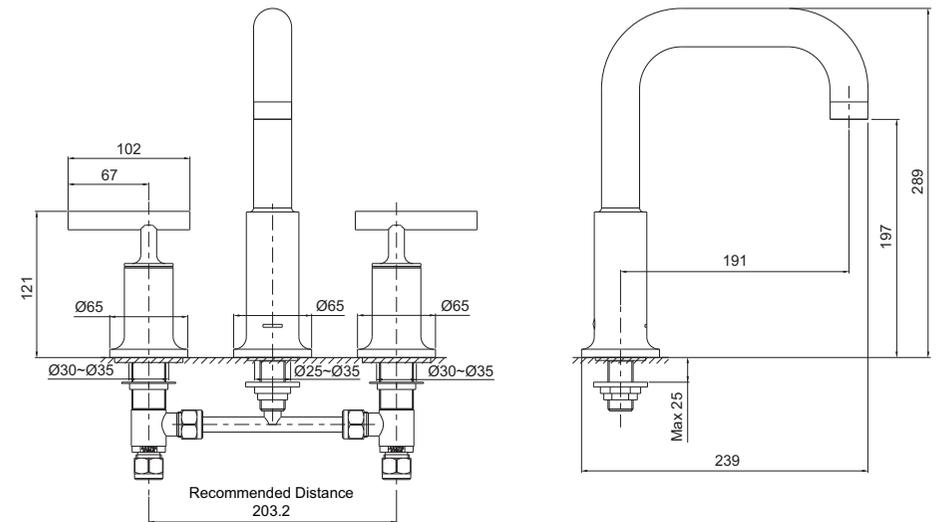


INSTALLATION

How To Install The Spout Shank

Remove the parts from the shank(1) and retain them according to the following order: the nut(2), the nut(3) and the metal washer(4).

Install the foam washer(5) to the shank, then insert the shank into the center hole of the deck or bath tub.

From the underside of the deck or bath tub, install the metal washer(4), the nut(3), and the nut(2), use a wrench to tighten the nut(3), then tighten the nut(2).

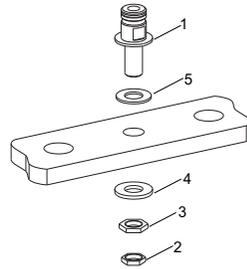

How To Install The Side Bodies


Remove the collars(6) from the side bodies(8). Trim the tee-piece(9) to suit the deck or bath tub hole centres. Loosen the nuts(10) on the side bodies, and assemble the tee-piece to the side bodies. Tighten the nuts(10) by hand.

Insert the side bodies with the washers(11) and the nuts(7) through the mounting holes from underside of the deck or bath tub (The side body with the red dot should be on the left when facing the front of the bath set), and locate the tee-piece onto the spout shank.

If the tee-piece cannot be inserted into the shank, you can loosen the nuts(10) by hand, and adjust the tee-piece position. Then tighten the nuts(10) with a wrench.

Install the collars(6) onto the side bodies. Tighten the nuts(7) with a wrench.

Attach the water supplies to the valve bodies. Hot water to left valve body, cold water to right valve body.

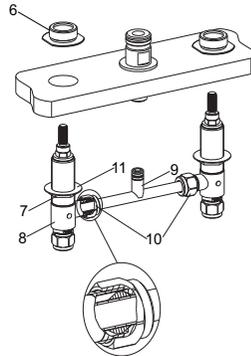


How To Install The Handles And The Spout


Install the foam washers(15) to the bottom of the handle kits(12). Press the handle kits(12) onto the valve stems(16) and tighten them until they contact the deck as Fig.1 shown.

NOTE: The handle kit with red washer should be installed on the left.

Insert the spout(18) to the shank until it contacts the deck. Tighten the screw(13) by the hex wrench(17), then insert the plug button(14) into the rear hole.

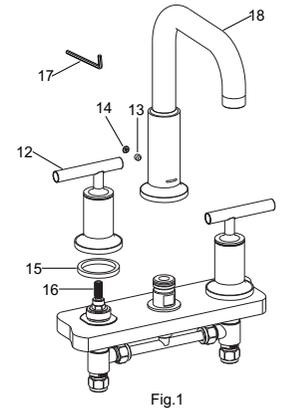

The illustration Fig.2 shows the correct position for the installed spout and handles when closed.

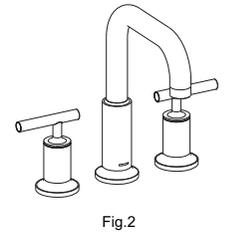


INSTALLATION CHECKOUT

Ensure that all connections are tight. Ensure that the handles are in the off position.

Turn on the drain and main water supply, and check for leaks. Repair as needed.

Remove the aerator kit(19). Turn on the tap handles. Run the water through the spout about one minute to remove any debris. Remove any debris from the aerator. Shut off the tap handles. Reinstall the aerator.

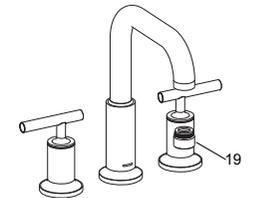

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.