

Bath spout - Wall mount: 14676A

### BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.

#### NOTES:

1. The installer must provide a G1/2" male supply fitting(1), protruding 15mm out from the face of the finished wall.
2. Flush the water supply pipes thoroughly to remove any debris.
3. An in line water filter must be used with this product.
4. Inspect the supply pipes for damage. Replace as necessary.
5. Observe local plumbing codes.
6. Check for leaks before covering the pipes, repair as needed.
7. Recommended working pressure: 100 to 500kPa.
8. Maximum working pressure: 800kPa.
9. All installations should comply with the relevant requirements of AS/NZS 3500.


### ROUGH-IN DIMENSIONS

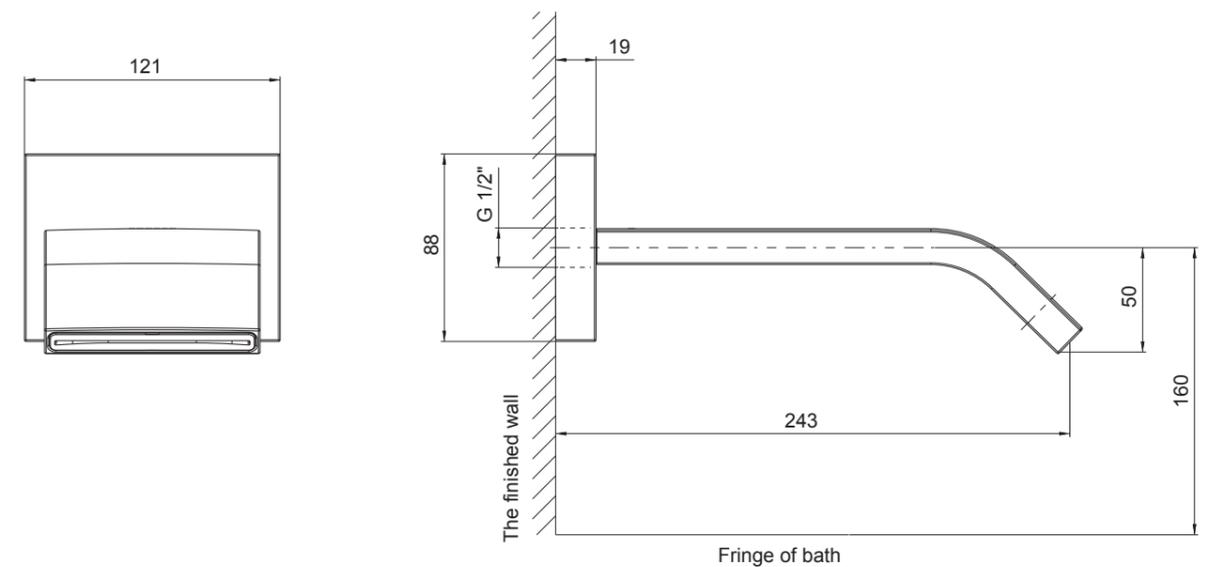

## INSTALLATION - Outlet bush


NOTE: The installer must provide a G1/2" male supply fitting(1), that protrudes out from the finished wall 15mm.

- 1.) Apply thread sealant to the thread of the G1/2" male fitting.

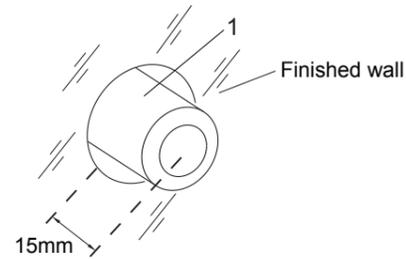


## INSTALLATION - Spout

- 1.) Apply a ring of plumbers putty or other sealant to the spout(2) base.
- 2.) Assemble the spout onto the G1/2" male fitting(1). Adjust the spout(2) so that the grub screw hole in the spout base faces downwards.
- 3.) Tighten the grub screw(3) at the bottom of the spout using the hex key(4) but be careful not to overtighten the grub screw.
- 4.) Remove any excess putty.

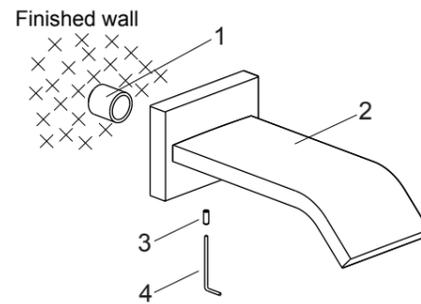

## INSTALLATION CHECKOUT

- 1.) Ensure that all connections are tightened.
- 2.) Remove the aerator kit(5) with the key(6). Run hot and cold water through spout for about one minute to remove any debris. Check for leaks at this time.
- 3.) Turn off the water supply. Remove any debris from the aerator kit(5). Reinstall the aerator kit.

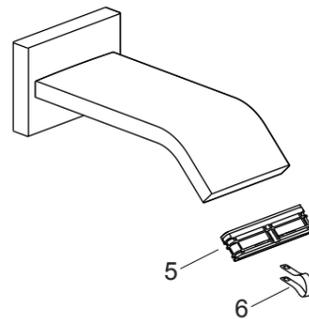

## CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with a clean soft cloth. Many cleaners may contain such chemicals as ammonia, chlorine, toilet chemicals etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler fittings.

# KOHLER®


## SPARE PARTS

BATH TAPWARE

# LOURE

Bath Spout - Wall Mount

Bath spout - Wall mount: 14676A

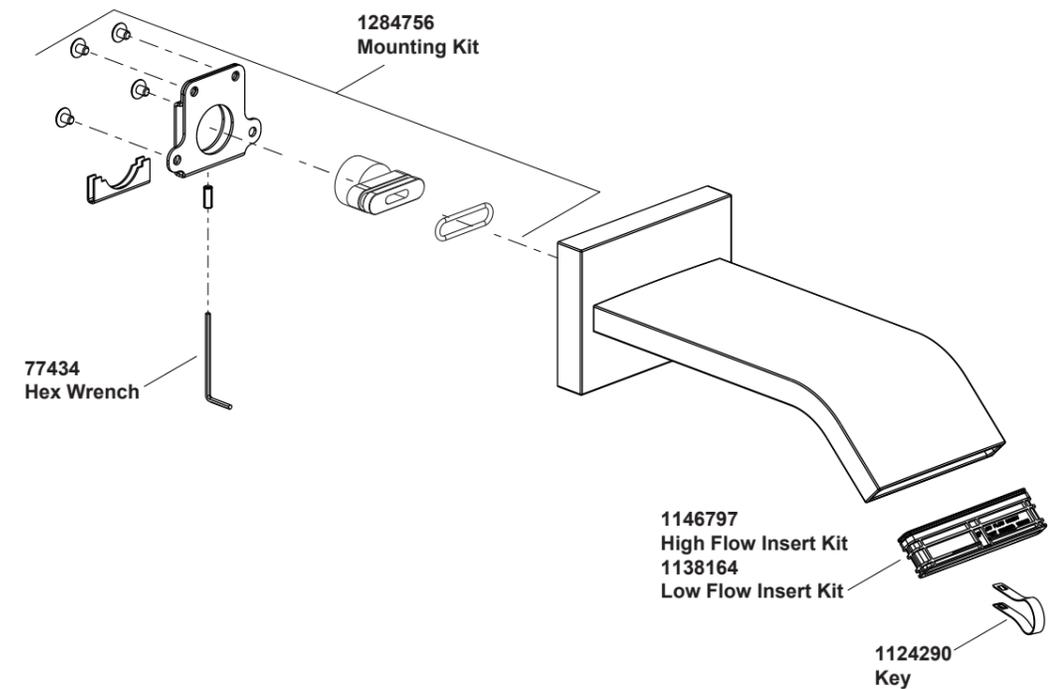

\*\*Color code must be specified when ordering